

# Entrance

## Expressguide



### Add codes

Factory set master code is 123. User ID 000, 001, 002 are master users.  
Normal user ID ranges from 003 to 999.

**\* User ID (3 digits) Master Code \* User Code (max. 8 digits) \* User Code \***

Code is added successfully when the keypad light turns green and one long beep is heard.

### Remove codes

User ID 000, 001 and 002 are master users that cannot be removed by keypad programming.

**\* User ID (3 digits) Master Code #**

Code is removed when one beep is heard.

### Volume settings

**#0 Master Code #0--Mute**

**#0 Master Code #1--Low**

**#0 Master Code #2--Loud**

### Lock signal settings

**#1 Master Code #1--Output 200 MS pulse**

**#1 Master Code #2--Output 400 MS pulse**

**#1 Master Code #3--Output 600 MS pulse**

**#1 Master Code #4--Output 5 secs. pulse**

**#1 Master Code #5--Output 8 secs. pulse**

**#1 Master Code #6--Output 10 secs. pulse**

### Deactivate auto lock

**#1 Master Code #7--Output retains unless**

1. user code is entered once again;
2. exit button on the inside unit is pushed;
3. external exit button is pushed;
- or 4. the door is open and then closed.

### Lock out mode setting

People entering 3 incorrect codes in a row or using 5 incorrect key tag will be locked out for 5 seconds.

**#2 Master Code #0--Lock out mode deactivated**

**#2 Master Code #1--Lock out mode activated**

# Entrance

## Expressguide



### Outside unit disconnected

When the outside unit is swapped, the lock will not function until the exit button on the inside unit is pushed or unlocking command is sent to the lock via zigbee.

**#3 Master Code #0--Function deactivated**

**#3 Master Code #1--Function activated**

### Camouflage function setting

**#4 Master Code #0--Camouflage function deactivated**

**#4 Master Code #1--Camouflage function activated**

### Inside LED dimmable settings

**##7 Master Code #0--Turn off the inside light**

**#7 Master Code #1--10% dimmable**

**#7 Master Code #2--20% dimmable**

**#7 Master Code #3--30% dimmable**

**#7 Master Code #4--40% dimmable**

**#7 Master Code #5--50% dimmable**

**#7 Master Code #6--60% dimmable**

**#7 Master Code #7--70% dimmable**

**#7 Master Code #8--80% dimmable**

**#7 Master Code #9--90% dimmable**

### Add key tag

**#8 User ID (3 digits) Master Code #keytag**

Keytag is added successfully when the keypad light turns green and one long beep is heard.

### Remove key tag

**#9 User ID (3 digits) Master Code #**

Key tag is removed successfully when the keypad light turns green and one long beep is heard.

### Fabric reset

**#9 User ID (3 digits) Master Code #**

Long press the inside reset button for 2 seconds. Lock is reset successfully when the keypad light turns green and one long beep is heard.

# Entrance

## Expressguide



### **Zigbee binding/unbinding**

**##7**

The keypad green light gives one flash and one long beep is heard.

### **UART output**

**##0**

(one green light flash) 1-10 digits # (one long beep heard)

### **2FA mode**

Lock open only with key tag+PIN Code

**##2 Master Code #0--Security mode deactivated**

**##2 Master Code #1--Security mode activated**

### **Sabotage alarm**

Sabotage alarm goes off when the sabotage switch on the outside or inside gets loose.

Press the switch tightly against the wall and push the inside exit button to disarm the alarm.